



TO0200R USER MANUAL SHINY LED LIGHT RECHARGEABLE

STANDARD	
	h 1h 10' h 3h 30'
	22.000 lux @ 1 m (Peak beam intensity)
	1 m (Impact Resistant)
	IPX-8, 100 meters (Underwaters and Diving)

SHINY, RECHARGEABLE LED TORCH

Compliments for purchasing the LED torch SHINY by Omer-sub. This torch is the result of technological progress based on years of experience in the underwater fishing sector. The versatile use, features, high quality materials and concept technology make this torch an absolutely unique and essential item for apnoea diving and underwater fishing.

The simple shape and small size make it easy to place anywhere, and hook on to any equipment to minimise bulk. The torch SHINY has been designed for use in apnoea, but is also ideal for sport diving with a self-contained breathing apparatus.

IMPORTANT WARNINGS

- CAUTION:** Before using the torch SHINY, read this Manual carefully.
- CAUTION:** Do not direct the torch towards your eyes or towards the eyes of others, either overground or under water.
- CAUTION:** Make sure to lock the switch during transport to avoid switching on the torch unintentionally.
- CAUTION:** Make sure to remove the batteries during air travel.
- CAUTION:** When replacing the batteries, remember to check that the positive and negative ends are facing the correct direction.
- CAUTION:** Use top quality batteries.
- CAUTION:** Never leave the unused packaged torch for long periods with the batteries inserted.
- CAUTION:** During periods when the torch is not used, keep the front ring slightly unscrewed to avoid locking the same.
- CAUTION:** It is mandatory to make sure that the positive and negative ends of the batteries are facing the correct direction.
- CAUTION:** If the batteries are incorrectly inserted (inverted direction of positive and negative ends), a short circuit is generated, causing irreversible damage with the danger of the torch exploding!

GENERAL WARNINGS

- Do not keep the torch switched on outside the water.
- Do not unscrew the frontal ring of the torch while diving or if it is wet.
- Do not unscrew the frontal ring of the torch while diving or if it is wet.
- Always use original spare parts for any ordinary or extraordinary maintenance operations, including bulb replacement.
- Clean and lubricate the O-rings periodically with silicone grease.
- Always rinse with soft water and dry after every use.
- Unscrew the front ring of the torch anti-clockwise.
- Insert the batteries following the indications of the positive and negative ends (+ or -).
- Lubricate the O-ring seals with a film of silicone grease.
- Screw on the frontal ring clockwise.
- Check that the torch switches on with the dedicated switch.

CHECK BEFORE DIVING

- Check perfect closure of the body.
- As soon as you touch water, check that no bubbles continuously escape from the body of the torch.

FLOODING

If any water happens to enter the torch, follow these instructions: unscrew the frontal ring and remove the unusable battery; rinse the inside of the torch with soft water and then dry with a cloth and the warm air of a hairdryer, paying special attention to the mechanical parts. Carefully remove any oxide that might have formed on metal parts, insert the new batteries and perform a function test. If the torch were to remain for a long period with a considerable amount of water inside, rinse the internal parts with soft water but then contact the authorised dealer for any repairs that might be required.

MAINTENANCE AND TRANSPORT

It is important to follow the instructions below:

- Always carry the torch inside a bag to protect it from impact.
- Avoid prolonged exposure to sunlight.
- At the end of every diving session (sea, lake or swimming-pool), always rinse with soft water and dry.
- Check the condition of the O-ring seals every time the front ring has been removed.
- Clean and lubricate opening parts with silicone grease.
- We advise getting the item inspected by an authorised dealer once a year.
- During transport you must keep the front ring slightly unscrewed to prevent battery damage.

WARRANTY







 

 
 
All Omer-sub products are guaranteed from material and processing defects for a period of 2 years after the date of purchase.

This warranty does not cover damage caused by:

- Improper or incorrect use.
- Modifications or repairs performed by unauthorised persons.
- Accidental or natural events.
- Use in polluted water or in waters with a high content of chlorine.
- Use in fluids other than water.
- Prolonged exposure to sunlight or intense heat sources.

Omer-sub declines all responsibility for damage caused by incorrect use of the equipment.

The same applies for direct or indirect damage of any kind caused to persons or things due to any periods when the product is not used or due to wrong use of the same.


 h	1h 10'
 h	3h 30'
	22.000 lux
	100 m
	T6061-T6 Anodized Aluminum
	4.2 V
	1 x C0725 Li-Ion Battery
	Slide magnetic switch
	Length: 150 mm, Ø Head: 44.5 mm Body Ø: 29 mm
	250 g (whithout battery)

ACCESSORIES

Car Charger and AC-DC Charger .


STRUCTURE

 - 1 - Cork
- 2 - 2nd Stage
- 3 - 1 St Stage
- 4 - Head

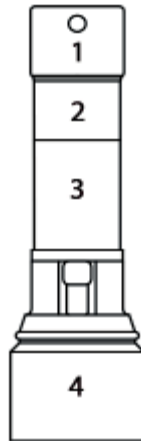

BATTERY INSTALLATION

 Insert 1 x 18650 Li-ion with the positive (+) end pointing toward the flashlight head. Attention to battery polarity.

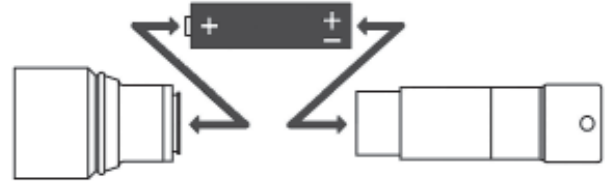


CHARGING:

Two charging methods is available

- Plug the charger into the Charge hole of the flashlight.

- Charge indicator flash red
Means :charging

 - Charge indicator flash green
Mean: charging is over.

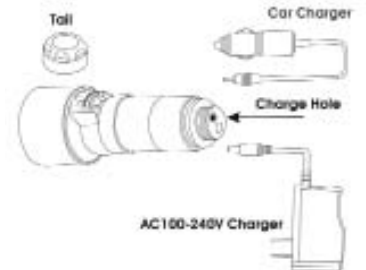

WARNING

1. Battery must be inserted with the positive (+) end toward the light head.
2. Do not use an alternative battery !!!▲!!!
3. Avoid any impact with the receiver and lens.
4. No using when charging. And take down the flashlight exceed 7 hrs if the charger light still flashes, then feedback to us or local distributor.
5. Dry the charge hole after a dive to inhibits its oxidation.
6. Unscrew body from the head if not use the lights.
- 7 Clear the slide switch with clean water after a dive.

WARNING: The cork, the 2nd stage and the 1st stage, must to be tight screwed.



WARNING: During periods when the torch is not used, keep the front ring slightly unscrewed to avoid locking the same.



You can get the complete multi languages owners manual from our website

www.omersub.com